



SMALL DOG BED 24"w x 17"d


FRONT

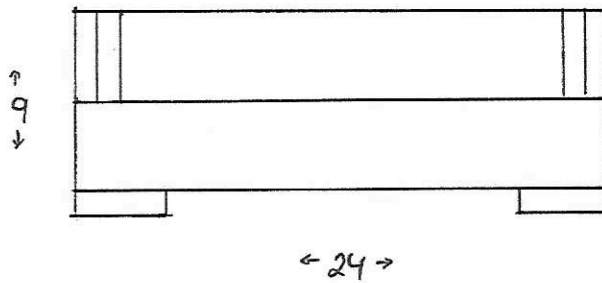


SIDE

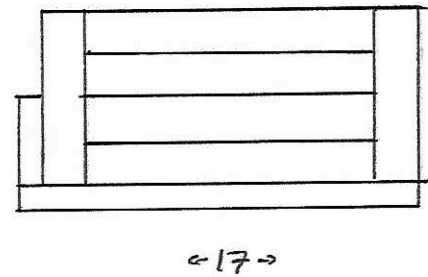

BACK

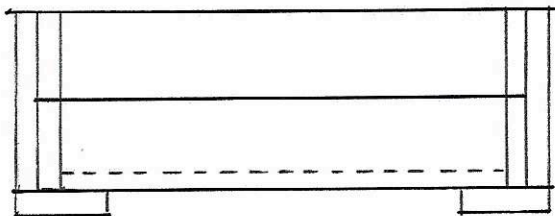

TOP

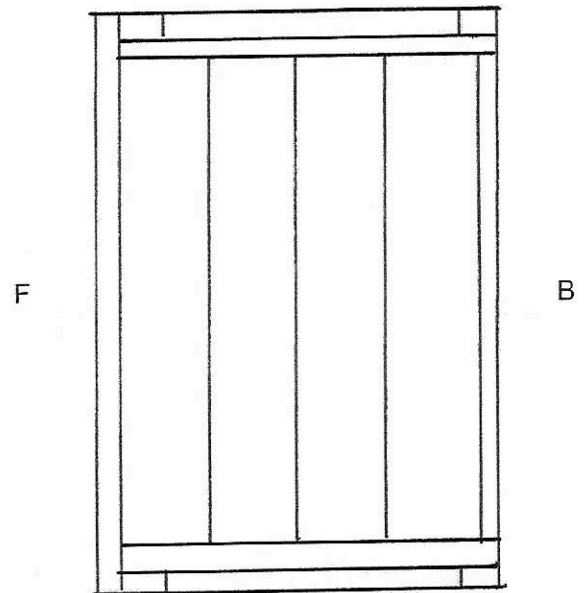

YOU WILL NEED:


- 1 - 1" x 2" x 8' \$5.36
- 1 - 1" x 4" x 2' \$2.57
- 1 - 1" x 4" x 4' \$5.10
- 2 - 1" x 4" x 8' \$21

NOTE: PRICES AND LUMBER SIZES ARE BASED ON AVAILABLE PRODUCTS AT HOME DEPOT. HOME DEPOT ALSO HAS ONLINE ORDERS FOR IN STORE PICK UP AVAILABLE.

CUT SHEET

1 - 1" x 2" x 8'


4 - 8" CUTS
4 - 13' CUTS

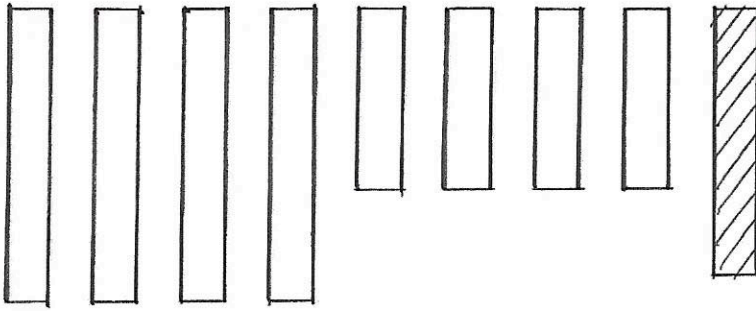

APPROX 12" WASTE


1 - 1" x 4" x 2'

1 - 24" PIECE



2 - 1" x 4" x 8'

3 - 20" CUTS
2 - 17" CUTS

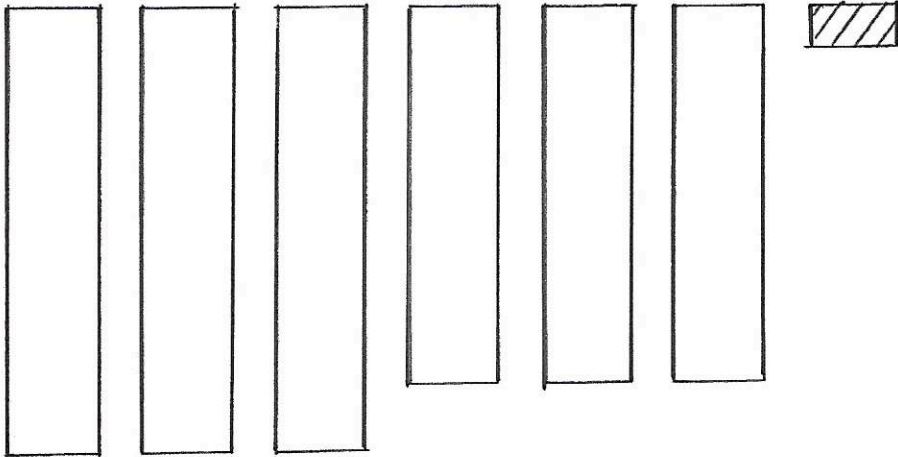


APPROX 2" WASTE

THESE CUTS ARE TO BE DONE TO BOTH PIECES. FOR A TOTAL OF 10 CUT
PIECES. 6 - 20" AND 4 17".

1 - 1" x 4" x 4'

2 - 18" CUTS

APPROX 12" WASTE

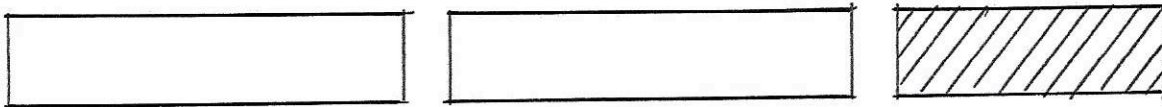



NOTES: WHEN MAKING YOUR CUTS ALWAYS REMEMBER TO CUT ON THE
OUTSIDE OF YOUR CUT LINE SO YOUR PIECES WILL BE THE RIGHT LENGTH.

STEP BY STEP HOW TOO



ONCE OU HAVE ALL YOUR PIECES CUT, FOLLOW THE DIRECTIONS BELOW

INSTRUCTIONS



1. TAKE YOUR TWO 1" x 4" x 18" CUT PIECES

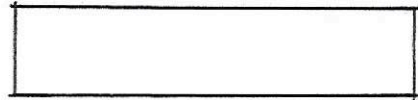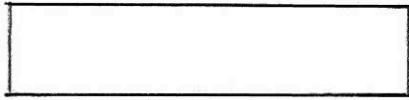



WITH A PENCIL MAKE A LINE TO MARK THE 1" SET BACK NEEDED FOR THE FRONT.

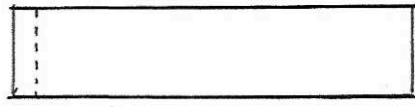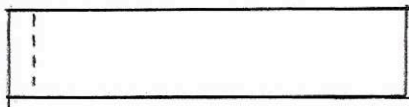


WITH A PENCIL MAKE A LINE DOWN THE CENTRE OF THE WOOD, 2" ON EITHER SIDE OF THE LINE.

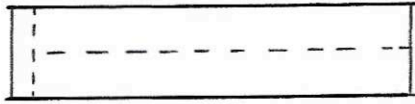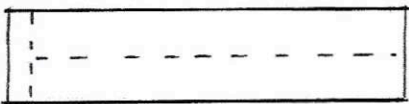

2. MEASURED FROM THE INSIDE EDGE TO INSIDE EDGE OF THE WOOD, LAY THE TWO 18" PIECES 16" APART

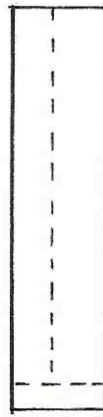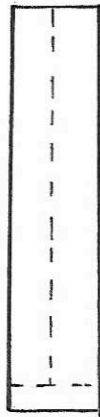


3. YOU WILL NOW NEED FOUR OF YOUR 1" x 4" x 20" CUT PIECES. THIS WILL BECOME THE BASE FOR THE BED. STARTING AT YOUR 1" SET BACK LINE AT THE FRONT, LAY AND FASTEN DOWN YOUR PIECES, ONE AFTER THE OTHER. WHEN YOUR DONE YOU WILL ALSO HAVE A 1" GAP LEFT AT THE END. THIS WILL BE LATER USED TO REST THE BACK WALL ON.

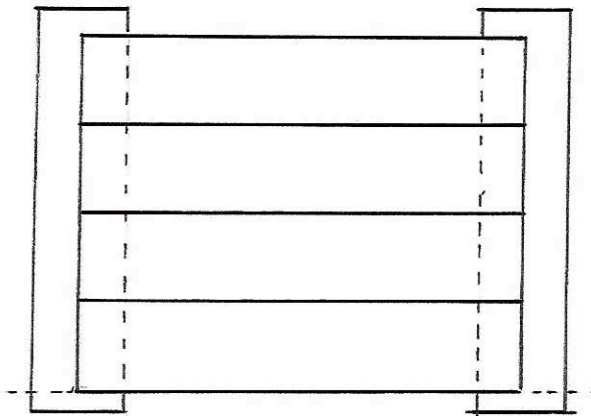



PUT WHAT YOU JUST BUILT ASIDE.

4. YOU WILL NOW NEED YOUR 1" x 4" x 17" CUT PIECES AND YOUR REMAINING TWO 1" x 4" x 20" CUT PIECES. TAKE THE 1" x 4" x 17" CUT PIECES AND FASTEN ONE TO EACH SIDE OF THE 1" x 4" x 20" CUT PIECES.


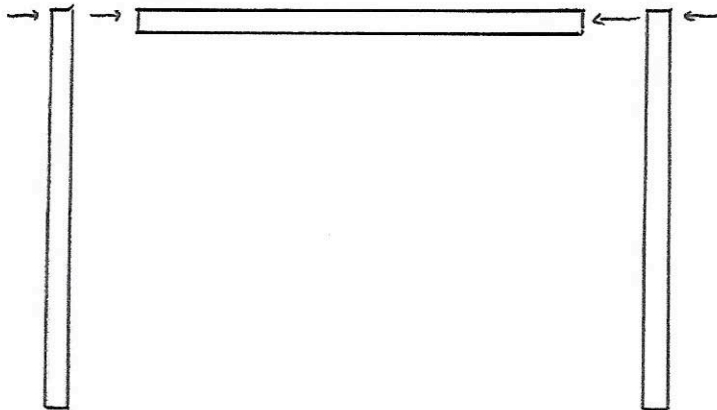


REPEAT SO THAT YOU HAVE TWO PIECES THE SAME.



5. YOU WILL NEED YOUR 1" x 2" x 13" CUT PIECES AND YOUR 1" x 2" x 8" CUT PIECES. PLACE THE TWO PIECES YOU JUST FASTENED TOGETHER ON TOP OF ONE ANOTHER, THEN ONE SIDE AT THE TIME FASTEN THE 1" x 2" x 8" CUT PIECES TO THE OUTER EDGES OF TWO 17" SIDES.

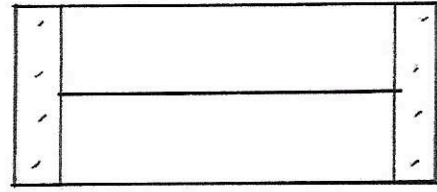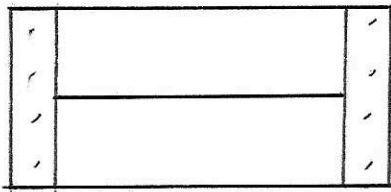

NOW TAKE YOUR 1" x 2" x 13" CUT PIECES AND FASTEN THEM TO THE TOP AND BOTTOM OF THE TWO 17" SIDES.

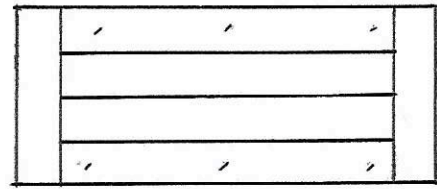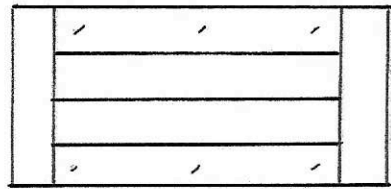


6. NOW YOU HAVE TWO PIECES. TAKE THE BASE THAT YOU BUILT EARLIER AND PUT IT UPSIDE DOWN ON TOP OF THE PIECE YOU JUST BUILT. ALIGN THE BACK SO THAT IT IS FLUSH, LEAVING THE 1" GAP AT THE FRONT.

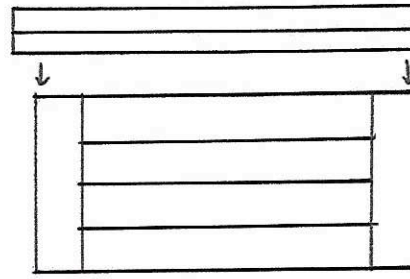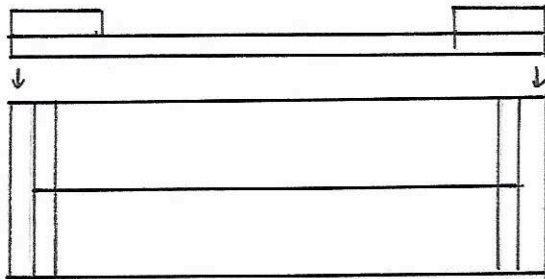

FASTEN BASE AND FLIP OVER

7. YOU ARE ALMOST DONE... NOW YOU NEED YOUR LAST PIECE. TAKE THE 1" x 4" x 24" PIECE, REST IT ON THE 1" LIP ON THE FRONT OF THE BASE, THEN FASTEN IT.

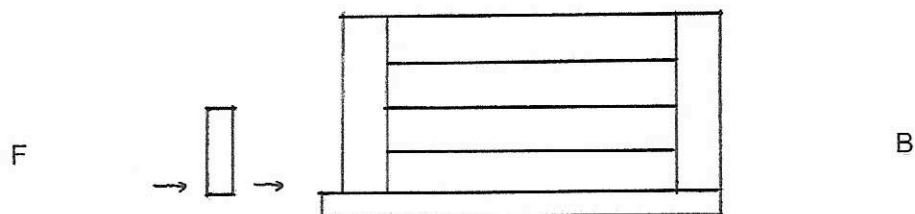

8. SAND DOWN YOUR EDGES TO MAKE SURE THAT THERE IS NO SPLINTERED WOOD FROM THE CUTS. YOU CAN NOW STAIN THE WOOD OR PAINT IT YOUR DESIRED COLOR. AND THEN DON'T FORGET TO ADD BLANKETS AND PILLOWS TO MAKE IT COMFY FOR YOUR FURRY FRIEND...

NOTE: IF USING THIS BED INDOOR'S YOU MAY WANT TO ADD FELT PADS TO THE BASE TO PROTECT YOUR FLOOR FROM BEING SCRATCHED.